

Specification

Model	SMC-A130SL20C
Pick up Element	1/3" Aptina 1.3MP CMOS Sensor
Effective Picture Elements (H×V)	1280 X960
Resolution	960P
Minimum Illumination	0.001 Lux/F1.2
S/N Ratio	More than 50dB
Synchronous System	Internal, Negative sync.
IR Distance	20 Meters (with Φ5X24PCS Infrared LED)
IR Power On	Photodiode AUTO Control
Video Output	CVI
Functions	WDR,3DNR,UTC
Power/Current	DC12V(+/-10%)/500mA
Lens	Board Lens 3.6mm
IP Rating	/
Dimension (mm)	Φ94 x 69(H)
Weight (g)	450
Operating Temperature	-10~+50 RH95% MAX

Accessories list

Name	Number
Camera	1
User Guide	1

Notes:

Do not attempt to disassemble the camera. If the camera can not work, please contact local franchiser or our company.

CCTV Camera

Vandalproof IR Dome Camera



Thank you for using our product.
Before providing power for the camera, please read this manual carefully before use.


We adopt the latest technical of sensor and driver. It owns the characters of high definition and stability, strong anti-jamming, rich and real color. Fixing and using this model are convenient too. It is very good for you to apply to your CCTV system.

Main Features

- > **Auto Gain Control (AGC)**
Built-in auto gain control (AGC) circuit. The color camera can get high definition picture in low Lux condition.
- > **Auto Electronic Shutter (AES)**
Built-in auto electronic shutter function. The color camera's AES speed can reach 1/100,000s.
- > **Gama Characteristic**
Camera Gama characteristic is 0.45.
- > **Scanning Mode**
NTSC or PAL mode.
- > **OSD MENU**

IMAGE	3D-NR	AUTO/MANUAL		
	WDR	ON/OFF		
	IRIS	MANUAL/AUTO/CLOSE/OPEN		
	EXPO-SURE CONTROL	AE MODE	GLOBAL/CENTER/CENTER WEIG/ BACK LIGHT/FRONT LIGHT/ DISTINGUISH/INTELLIGENT	
		BRIGHTNESS	0-250	
		SHUTTER CONTROL	AUTO/MANUAL(0-8)	
		GAIN CON- TROL	AUTO/MANUAL(0-815	
	WB	AWB-TEMP		
		AWB-AI		
		MANUAL:R-GAIN/G-GAIN/B-GAIN		
		AWB-GW		
	IMAGE ENHANCE	AWB-PRO		
		SHARPNESS	DETAIL/EDGE	
CONTRAST		AUTO/MANUAL/GAIN MAP		
SATURATTON		AUTO/MANUAL		
ADVANCED	ZONE MASKING	COLOR	MOSAIC/WHITE/YELLOW/CYAN/ GREEN/MAGENTA/RED/BLUE/BLACK	
		AREA NO.1-8	STATUS:OFF/ON	
			HORIZON SIZE/VERTICAL SIZE HORIZON MOVE/VERTICAL MOVE	
	MOTION DETEC- TION	SENSITIVITY	HIGH/MIDDLE/LOW/WEAK	
		AREA NO.1-4	STATUS:OFF/ON	
			COLOR:WHITE/YELLOW/CYAN/ GREEN/MAGENTA	
			HORIZON SIZE/VERTICAL SIZE HORIZON MOVE/VERTICAL MOVE	
	MIRROR	OFF/ON		
	FLIP	OFF/ON		
	DAY&NIGHT	EXTERNAL/COLOR/B&W/AUTO		
VIDEO STANDARD	720P-25/720P-30			
LANGUAGE	ENGLISH/ITALIAN/FRENCH/RUSSIAN/CHINESE			
LOAD DE-				
SOFT VER-				
SAVE&EXIT				
EXIT				

Device connection

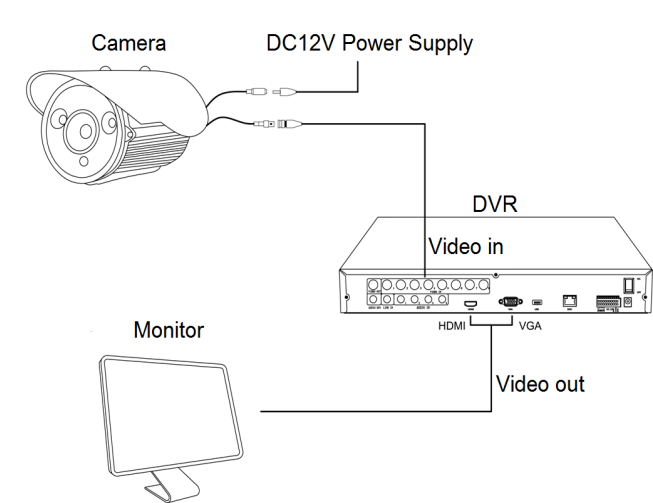

Safety instruction

- 1.Before using the camera ,please read this manual carefully and keep it safely for later use.
- 2.Installation should be proceed by professional service and follow manufacturer's instructions, do not dismantle without authoriza tion.
- 3.In order to prevent sensor ,do not expose lens to intense light source in long time.
- 4.Do not touch sensor directly. Please covers the dustproof cover when the camera is not being used.
- 5.Please use a dry soft cloth to clean the camera. If dirt difficult to clean, use detergent with water and wipe dry the camera.
- 6.Do not install camera under air conditioning's air gate ,or else lens blur with condensation of moisture.
- 7.Please ensure that all electric power sources are turned off when not open , installation ,clean, etc operation.
- 8.Please transporting , using and storing the camera in allowable temperature and humidity.
- 9.If the camera was broken, for example power cord or plug dam- aged,Splash liquid or foreign matter fall into camera, raining, wetting, etc can't work situation, please contact manufacturer or maintenance center (modify and maintenance without perm ission, you must be responsible for the problems).

Common Problems and Troubleshooting

- > **No Picture after providing power**
May be the power supply voltage abnormity, please check he power supply voltage and pole whether exactitude. Please check all the connecting cable and monitors whether be connected correctly or not.
- > **The picture level direction have flowing interference ripples**
May be caused by the power supply AC ripples, it need filter the wave of the power supply. Check the monitor and peripheral equipments used.
- > **The picture background color changes continuously**
The fluorescent lamp's electromagnetic field cause color roll. This is proper phenomenon of the cameras. Reduce the fluorescent lamp numbers or increase the distance between the camera and the fluorescent lamps can improve it. Use power supply external sync. camera can solve it.
- > **The picture smear too mass**
The power supply's voltage unstable. Connecting cables not connect correctly or have high impedance.



Note:

- Power supply must pass safety certification ,Its output voltage, current, voltage polarity and operating temper- ature must match requirement of this equipment.
- Please install lightning protection devices or cut off the power in thunder and lightning conditions.
- To capture high-quality video and pictures, please make sure the network connection is stable and smooth.
- Please note the camera's operating temperature and its using environment requirement. Avoid using the camera at too high or too low temperatures. The operating tem- perature is -30~+60℃. (Recommendatory operating tem- perature is -10~+50℃.)
- Do not mount the camera near by the radiator or heater.