

GS-5424PLG

User Manual

06-2015 / v1.0

Edimax Technology Co., Ltd.

No.3, Wu-Chuan 3rd Road, Wu-Gu, New Taipei City 24891, Taiwan

Email: support@edimax.com.tw

Edimax Technology Europe B.V.

Fijenhof 2, 5652 AE Eindhoven, The Netherlands

Email: support@edimax.nl

Edimax Computer Company

3350 Scott Blvd., Bldg.15 Santa Clara, CA 95054, USA

Live Tech Support: 1(800) 652-6776

Email: support@edimax.com

Table of Contents

Chapter 1 Product Introduction	3
1.1 Product Overview	3
1.2 Features	3
1.3 External Component Description.....	3
1.3.1 Front Panel.....	3
1.3.2 Rear Panel	5
1.4 Package Contents.....	5
Chapter 2 Installing and Connecting the Switch	6
2.1 Installation	6
2.1.1 Desktop Installation	6
2.1.2 Rack-mountable Installation in 19-inch Cabinet	6
2.1.3 Power on the Switch	7
2.2 Connect Computer (NIC) to the Switch.....	8
2.3 Switch connection to the PD.....	8
Chapter 3 How to Login the Switch	9
3.1 Switch to End Node.....	9
3.2 How to Login the Switch	9
Chapter 4 Switch Configuration	11
4.1 System Status.....	12
4.1.1 Device Information	12
4.1.2 Port Flow Chart	12
4.1.3 Traffic Statistics	15
4.2 Network	17
4.2.1 IP Address	17
4.2.2 MAC Addresses	17
4.2.3 DNS Settings.....	18
4.2.4 DHCP Protect	18
4.2.5 IGMP Snooping	18
4.3 Port Configuration	19
4.3.1 Port Configuration.....	19
4.3.2 Port Mirroring	20
4.3.3 MAC Limit.....	20
4.3.4 Port Aggregation	21
4.3.4. ACL	22
4.3.5 Port Limit.....	23
4.3.6 Storm Control.....	24
4.4 Port Security	25
4.4.1 Port Grouping.....	25
4.5 VLAN Configuration	25
4.5.1 802.1Q VLAN.....	25
4.5.2 PVID	26

4.6.POE Configuration.....	27
4.6.1. POE Global Setting.....	27
4.6.2 Power Priority	28
4.6.3 Power Supply	29
4.6.4.Power Limitation.....	30
4.6.5 POE Status.....	31
4.7 System Settings.....	32
4.7.1 Quick Settings	32
4.7.2 WEB Management.....	32
4.7.3 Administrator	32
4.7.4 System Config.....	33
4.7.5 Firmware Upgrade	34
4.7.6 System Time.....	34
4.7.7 Reboot.....	34
4.8 System log.....	35
4.8.1.Event Log.....	35
4.8.2 Alarm Log.....	35
4.8.3 Security Log.....	36
4.8.4 Network Log.....	36
4.8.5 Protocol Log	36

Chapter 1 Product Introduction

Thank you for purchasing an Edimax PoE Web Smart Ethernet Switch. Before you install and use the product, please read this manual carefully to make the best use of the product's functions.

1.1 Product Overview

The Edimax Pro GS-5424PLG is a web-smart switch with 24 Gigabit PoE+ ports and four Gigabit SFP slots. Designed for medium to large network environments, its standard 19-inch rack-mount brackets allow for integration with the most widely used mounting systems on the market. The Edimax GS-5424PLG is a superb choice to boost your network environment's performance and efficiency.

1.2 Features

- Supports 24 10/100/1000Mbps Gigabit Ethernet ports and 4 mini-GBIC/SFP slots
- IEEE 802.3af/at PoE compliant to simplify deployment and installation
- Supports PoE up to 30 W per port with 400 W total power budget
- Automatically detects powered devices (PD) and power consumption levels
- IEEE 802.1Q VLAN allows network segmentation to enhance performance and security
- Supports Access Control List (ACL)
- Switch capacity: 56Gbps, Forwarding rate: 35.7Mbps
- Supports IGMP Snooping V1 / V2
- 8K MAC address table and 9K jumbo frames
- 19-inch rack-mountable metal case

1.3 External Component Description

1.3.1 Front Panel

The front panel of the switch consists of 24 x 10/100/1000Mbps RJ-45 ports, 4 x SFP ports and a series of LED indicators as shown as below:



Front Panel

10/100/1000Mbps RJ-45 ports (1~24):

Designed to connect to network devices with a bandwidth of 10Mbps, 100Mbps or 1000Mbps. Each has a corresponding 10/100/1000Mbps LED.

SFP ports (SFP1, SFP2, SFP3, SFP4):

Designed to install SFP modules and connect to network devices with a bandwidth of 1000Mbps. Each has a corresponding 1000Mbps LED.

LED indicators:

The LED Indicators will allow you to monitor, diagnose and troubleshoot any potential problem with the switch, connection or attached devices.



LED Indicators

The following chart shows the LED indicators of the Switch along with explanation of each indicator.

Power: Green

- Off: Power off
- On: Power on

System: Green

- Off: System not ready
- On: System ready
- Blinking: System booting

Copper Port 1G: Green

- Off: No 1G link
- On: 1G link

Copper Port: Yellow

- Off: 100M link fail
- Flashing: Sending or receiving data

SFP: Green

- Off: Link fail
- On: Connected

SFP: Yellow LED

- Off: Not sending or receiving data
- Flashing: Sending or receiving data

1.3.2 Rear Panel

The rear panel of the switch features the AC power connector:



Rear Panel

AC Power Connector:

Power is supplied through an external AC power adapter. Supports AC 100 – 240V, 50-60Hz

1.4 Package Contents

Before you start using this product, please check if there is anything missing in the package, and contact your dealer to claim the missing item(s):

- GS-5424PLG POE Web Smart Switch
- Quick Installation Guide
- CD
- Power Cord
- Rack-Mount Kit

Chapter 2 Installing and Connecting the Switch


This chapter describes how to install and connect your PoE Ethernet Switch. Please read the following topics and perform the procedures in the correct order. Incorrect installation may cause damage to the product.

2.1 Installation

- Put the switch in a stable place such as a desktop to avoid falling.
- Ensure the switch works in the proper AC input range and matches the voltage labeled.
- Do not open the switch's outer case even in the event of power failure.
- Ensure there is proper heat dissipation from and adequate ventilation around the switch.
- Ensure the switch's location can support the weight of the switch and its accessories.

2.1.1 Desktop Installation

Where standard 19-inch cabinet is not available, install the switch on a desktop and attach the cushioning rubber feet provided on the bottom corners of the switch to protect against external vibration. Allow adequate space for ventilation between the device and any objects around.

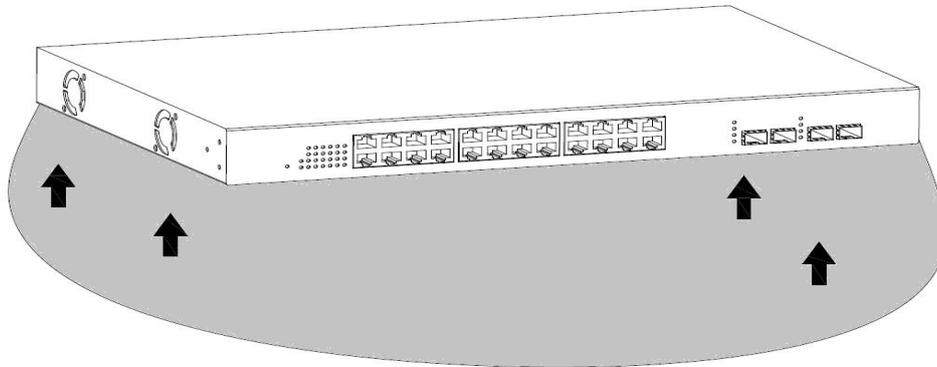


i

Figure 4 - Desktop Installation

2.1.2 Rack-mountable Installation in 19-inch Cabinet


The switch can be mounted in an EIA standard-sized 19-inch rack which can be placed in a wiring closet with other equipment. To install the switch, please follow these steps:

- A. Attach the mounting brackets on the switch's side panels (one on each side) and secure them with the screws provided.

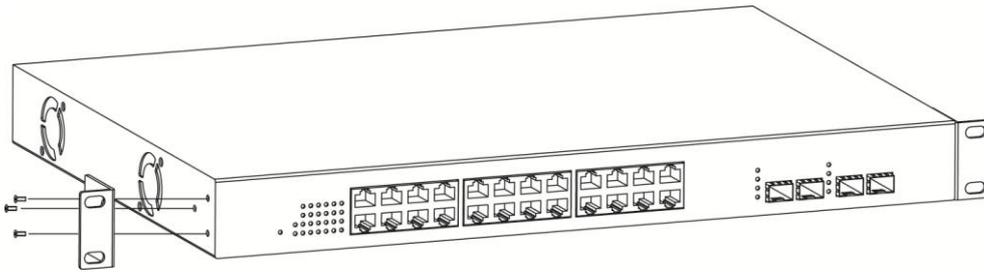

Bracket Installation

- B. Use the screws provided with the equipment rack to mount the Switch on the rack and tighten it.

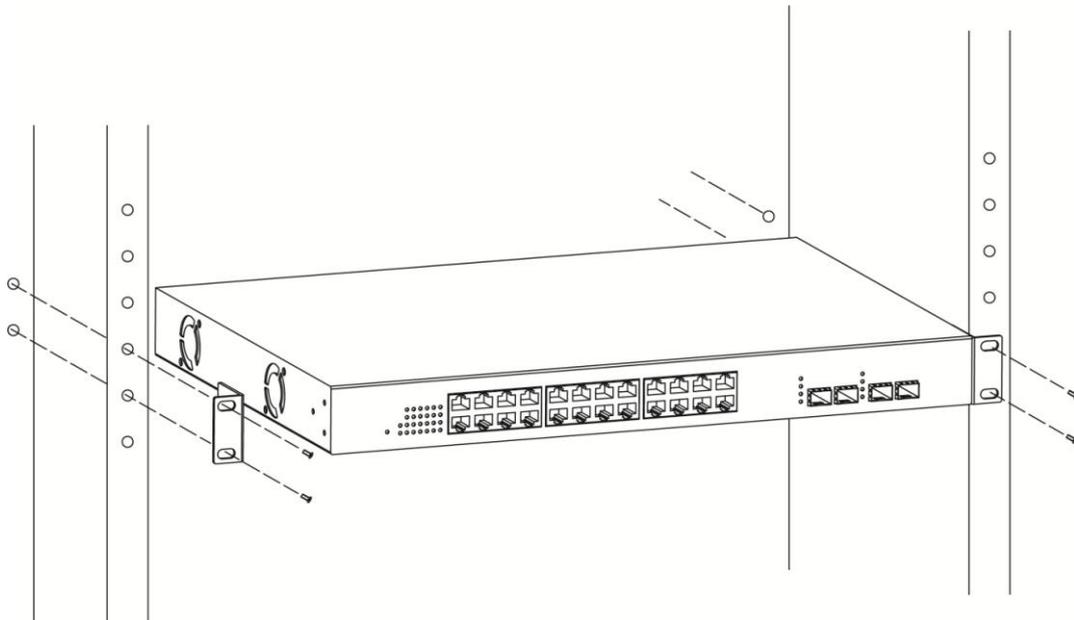

Rack Installation

2.1.3 Power on the Switch

The Switch is powered on by the AC 100-240 V 50/60Hz internal high-performance power supply.

AC Electrical Outlet:

It is recommended to use a single-phase three-wire receptacle with neutral outlet or multifunctional computer professional receptacle. Please make sure to connect the metal ground connector to the grounding source on the outlet.

AC Power Cord Connection:

Connect the AC power connector on the back panel of the switch to external receptacle with the included power cord, and check the power LED is on.

2.2 Connect Computer (NIC) to the Switch

Please insert the NIC into the computer, and after installing network card driver connect one end of the RJ-45 cable to your computer and the other end to any RJ-45 port of the switch, with a maximum distance between switch and computer around 100 meters. After the devices are powered on the LINK/ACT/Speed status indicator lights will display for corresponding ports of the switch.


2.3 Switch connection to the PD (Powered Device)

Ports 1-24 provide PoE power supply functionality with a maximum output power up to 30W each port. This can power PD devices such as internet phones, network cameras, wireless access points etc. Connect the switch PoE port directly connected to the PD port using a network cable.

Chapter 3 Login

3.1 Switch to End Node

Use a standard Cat 5/5e Ethernet cable (UTP/STP) to connect the switch to end nodes as shown below. Switch ports will automatically adjust to the characteristics (MDI/MDI-X, speed, duplex) of the device to which it's connected.

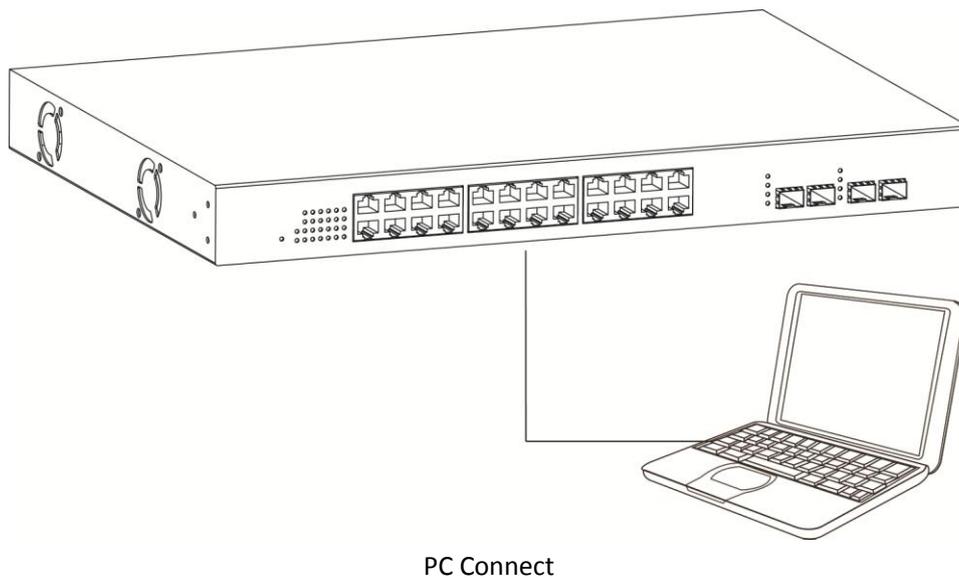

3.2 Login

Open a web browser and go to the switch's IP address. The default IP address is **192.168.2.1**. Your computer's IP address must be in the same subnet as the switch. For the default IP address this is any IP address in the range **192.168.2.x (x = 2 – 254)**. You can modify the IP address of your computer if you need.

Default IP address	192.168.2.1
Default user name	admin
Default password	1234

- 1.** Enter the switch's IP address (**192.168.2.1**) in the URL bar of a web browser. IE 7 or above is recommended.
- 2.** At the following screen login with the default username "**admin**" and password "**1234**".



3. You will arrive at the switch configuration window as shown below:

PortID	Management	Auto Negotiation	Link	Speed	Maximum Speed	Duplex	Flow Control	Description	Operating
1	Enable	Enable	Down	0M	1000M	Full	Close		
2	Enable	Enable	Down	0M	1000M	Full	Close		
3	Enable	Enable	Down	0M	1000M	Full	Close		
4	Enable	Enable	Down	0M	1000M	Full	Close		
5	Enable	Enable	Down	0M	1000M	Full	Close		
6	Enable	Enable	Down	0M	1000M	Full	Close		
7	Enable	Enable	Down	0M	1000M	Full	Close		
8	Enable	Enable	Down	0M	1000M	Full	Close		
9	Enable	Enable	Down	0M	1000M	Full	Close		
10	Enable	Enable	Up	1000M	1000M	Full	Close		
11	Enable	Enable	Down	0M	1000M	Full	Close		
12	Enable	Enable	Down	0M	1000M	Full	Close		
13	Enable	Enable	Down	0M	1000M	Full	Close		
14	Enable	Enable	Down	0M	1000M	Full	Close		

Chapter 4 Switch Configuration

The PoE smart switch software provides rich layer 2 functionality for switches in your networks. This chapter describes how to use the web-based management interface (Web UI) to configure the switch's features.

The left column shows the configuration menu. The top row shows the switch's current link status. Green squares indicate the port link is up, while black squares indicate the port link is down. Below the switch panel, you can find a common toolbar to provide useful functions. The rest of the screen area displays the configuration settings.



4.1 System Status

View device information and status.

4.1.1 Device Information

Go to **Status > Device Information**

This page allow you to configure status related information and view status information such as Device ID, MAC address, IP Address and System Time.



The screenshot shows the EDIMAX Pro web interface. The top navigation bar includes the logo, a language dropdown set to English, and links for Logout and Reboot. A left sidebar contains a menu with categories: System Status (expanded), Network, Port Configuration, Port Security, VLAN Configuration, POE Configuration, System Settings, and System Log. Under System Status, the following items are listed: Device Information, Port Flow Chart, Traffic Statistics, MAC Table, System Load, and Network Detection. The main content area displays a 'welcome ...' message and a table titled 'System Status >> Device Information'.

System Status >> Device Information	
Host Name	switch
Model	GS-5424PLG
Device ID	NET101111111111
Firmware Version	0.3.023d
MAC Address	00:32:30:00:00:AB
IP Address	192.168.2.1
Running Time	00:18:50
System Time	2015-06-08 10:32:04

© All rights reserved

Host Name: System name of the switch. This name will also be used as CLI prefix.


4.1.2 Port Flow Chart


System Status > Port Flow Chart

Port Select: Select one or multiple ports to configure.

Enabled: Port admin state.

- **Enabled:** Enable the port.
- **Disabled:** Disable the port.

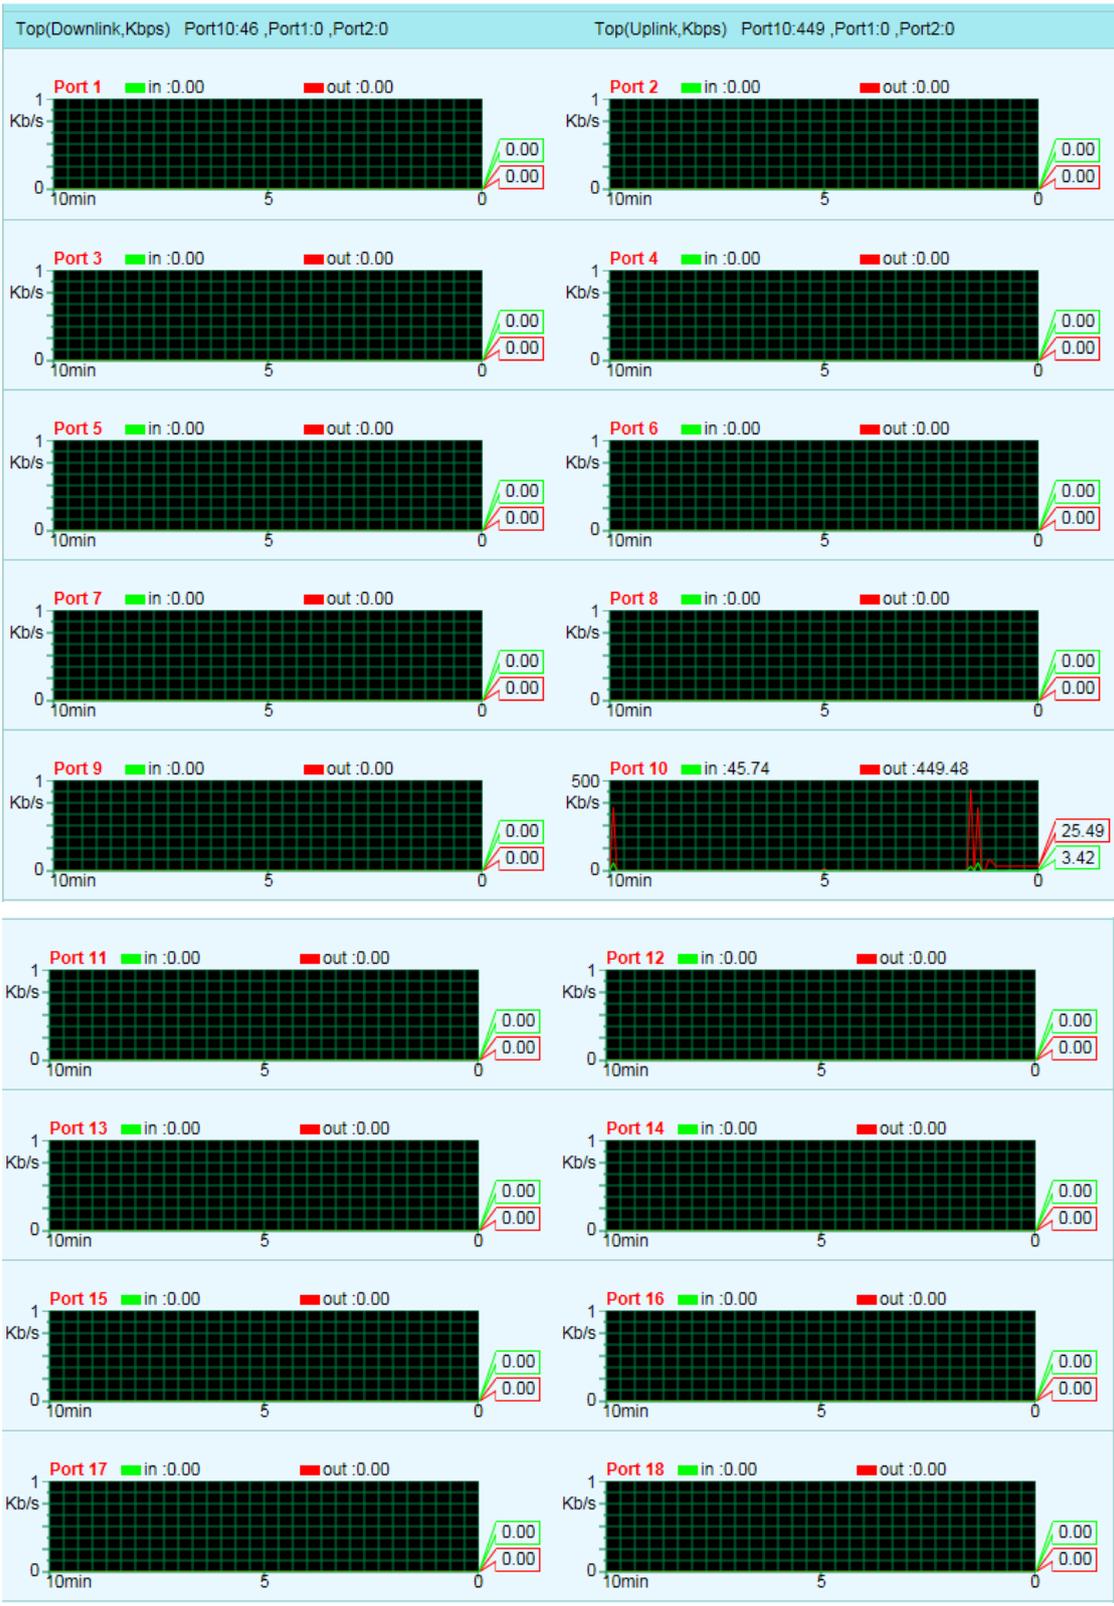

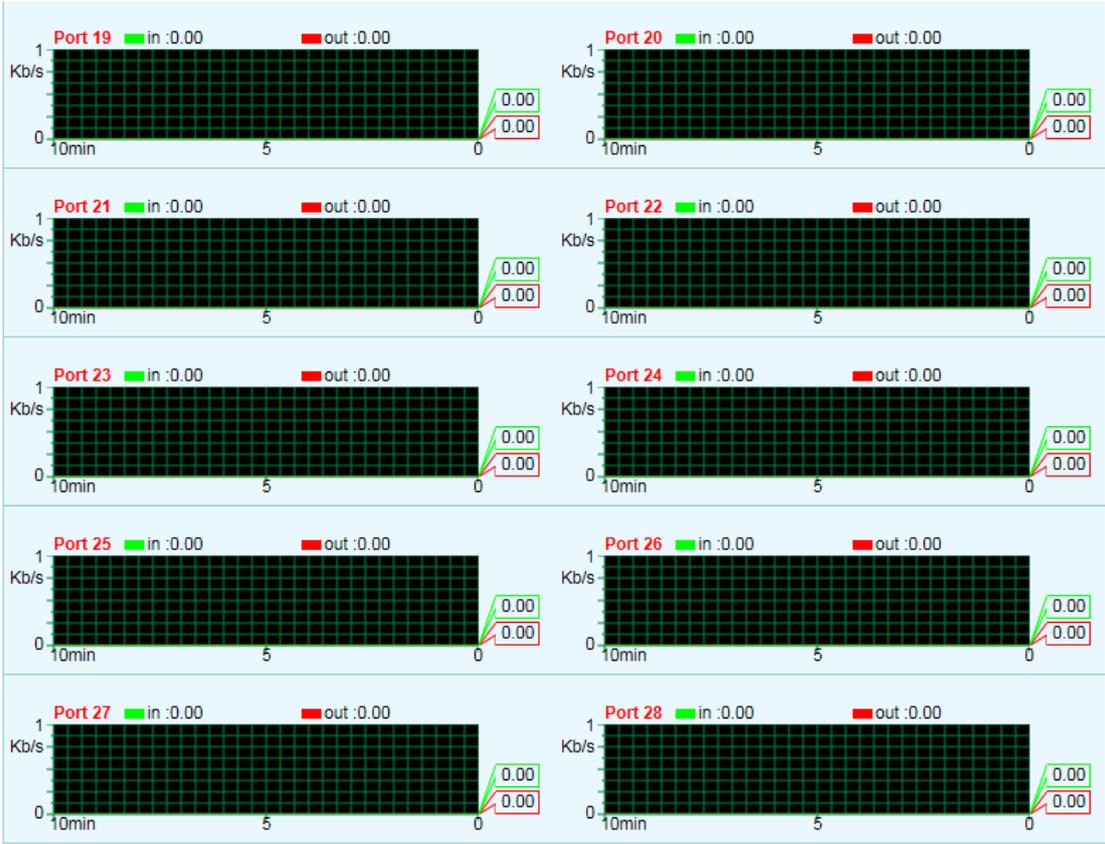

4.1.3 Traffic Statistics

System Status >> Traffic Statistics					
<input checked="" type="checkbox"/> Auto Refresh					
Port	Cumulative Flow	Unicast Packets	Multicast Packet	Broadcast Packets	Operating
1	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
2	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
3	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
4	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
5	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
6	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
7	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
8	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
9	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
10	298.96 KB / 2.51 MB	2065 / 2131	137 / 0	533 / 1242	Reset
11	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
12	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
13	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
14	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
15	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
16	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
17	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
18	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
19	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
20	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
21	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
22	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
23	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
24	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
25	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
26	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
27	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset
28	0.00 B / 0.00 B	0 / 0	0 / 0	0 / 0	Reset

4.1.4 Mac Table

4.1.4.1 Forwarding List

welcome ...

Forwarding List			
Port	MAC Address	VLAN ID	Status
10	70:5A:B6:B3:DF:05	1	Dynamic

total 1 Page Size Page No. 1 / 1 First Previous Next Last Goto

4.1.4.2 Set Static MAC

Mac Table > Set Static MAC

Forwarding List				
Set Static MAC		Dynamic Address Settings		
Number	MAC Address	VLAN ID	Port	Operating
		<input type="button" value="Save"/> +		

MAC Address: The MAC address to which packets will be statically forwarded. If Type is unicast, enter unicast MAC address in this field; If Type is multicast, enter multicast MAC address in this field.

Port: If Type is unicast, select the port number of the MAC entry; If Type is multicast, select the port list of the MAC entry.

VLAN: The VLAN ID number of the VLAN on which the above MAC address resides.

4.1.4.3 Dynamic Address Settings

Mac Table > Dynamic Address Settings

welcome ...

Forwarding List		Set Static MAC		Dynamic Address Settings	
Aging Time		<input type="text"/>			
<input type="button" value="Save"/>					
Information Name			Information Value		
Aging Time			300		

4.1.5 System Load

Service		System Load	
Service		<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
CPU Threshold		<input type="text" value="Close"/>	
Memory Threshold		<input type="text" value="Close"/>	
<input type="button" value="Save"/>			

Service: Enable: Select CPU Threshold percent & Memory Threshold percent.

Disable: CPU Threshold & Memory Threshold disabled.

4.1.6 Network detection

PING TRACERT	
* Detection Address	<input type="text"/>
Detection Packets	1 <input type="button" value="v"/>

4.2 Network

Use the Network page to configure settings for the switch network interface and connections to a remote server.

4.2.1 IP Address

Network > IP Address

This page allows you to edit IP address, Net Mask and Gateway.

 welcome ...

Network >> IP Address			
Default	IP Address	Netmask	Operating
<input checked="" type="radio"/>	192.168.2.1	255.255.255.0	
<input type="radio"/>	-	-	 

Default Gateway

IP Address: If static mode is enabled, enter IP address in this field.

Net Mask: If static mode is enabled, enter subnet mask in this field.

4.2.2 MAC Addresses

Network > MAC Address

 welcome ...

Network >> MAC Address	
MAC Address	<input type="text" value="00:32:30:00:00:AB"/>
MTU	<input type="text" value="1500"/>

MAC Address: Select the MAC address to show or clear dynamic MAC entries. If no port, VLAN and MAC address is selected, the dynamic MAC table will be cleared.

4.2.3 DNS Settings

Network > MAC Address

welcome ...

Network >> DNS Settings	
Primary DNS Server	<input type="text" value="0.0.0.0"/>
Secondary DNS Server	<input type="text" value="0.0.0.0"/>

Save

4.2.4 DHCP Protect

When the switch uses DHCP Protect, it will snoop protect message and DHCP requests and record the IP address and MAC address from DHCP ACK messages. DHCP Protect allows physical ports to be set as creditable ports or discreditable ports. Creditable ports can receive and forward the DHCP offer message while discreditable port will lose the DHCP offer message. This is sho the switch can identify false DHCP servers and ensure that the client gets a legal IP address from DHCP Server.

Network Configuration >> DHCP Protect					
Status	Port	Server IP	server Mac	Remarks	Operating
	-	-	-	-	

Save

4.2.5 IGMP Snooping

Network > IGMP Snooping

welcome ...

Basic Configuration		Multicast Table	
IGMP Snooping	<input type="radio"/> Enable <input checked="" type="radio"/> Disable		
Router Port	-		
Port Fast Leave	-		

Save


IGMP Snooping >> Querier	
Status Operation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Query Interval	<input type="text" value="60"/> S

Save

4.3 Port Configuration

4.3.1 Port Configuration

 welcome ...

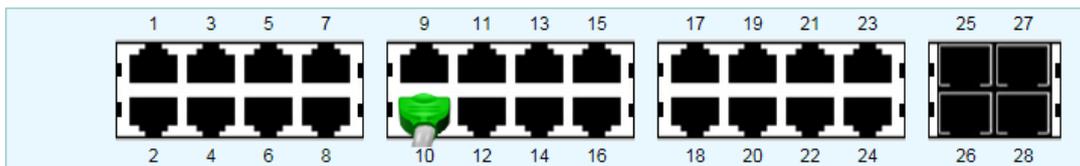

Port Configuration >> Port Configuration									
PortID	Management	Auto Negotiation	Link	Speed	Maximum Speed	Duplex	Flow Control	Description	Operating
1	Enable	Enable	Down	0M	1000M	Full	Close		
2	Enable	Enable	Down	0M	1000M	Full	Close		
3	Enable	Enable	Down	0M	1000M	Full	Close		
4	Enable	Enable	Down	0M	1000M	Full	Close		
5	Enable	Enable	Down	0M	1000M	Full	Close		
6	Enable	Enable	Down	0M	1000M	Full	Close		
7	Enable	Enable	Down	0M	1000M	Full	Close		
8	Enable	Enable	Down	0M	1000M	Full	Close		
9	Enable	Enable	Down	0M	1000M	Full	Close		
10	Enable	Enable	Up	1000M	1000M	Full	Close		
11	Enable	Enable	Down	0M	1000M	Full	Close		
12	Enable	Enable	Down	0M	1000M	Full	Close		
13	Enable	Enable	Down	0M	1000M	Full	Close		
14	Enable	Enable	Down	0M	1000M	Full	Close		
15	Enable	Enable	Down	0M	1000M	Full	Close		
16	Enable	Enable	Down	0M	1000M	Full	Close		
17	Enable	Enable	Down	0M	1000M	Full	Close		
18	Enable	Enable	Down	0M	1000M	Full	Close		
19	Enable	Enable	Down	0M	1000M	Full	Close		
20	Enable	Enable	Down	0M	1000M	Full	Close		
21	Enable	Enable	Down	0M	1000M	Full	Close		
22	Enable	Enable	Down	0M	1000M	Full	Close		
23	Enable	Enable	Down	0M	1000M	Full	Close		
24	Enable	Enable	Down	0M	1000M	Full	Close		
25	Enable	Enable	Down	0M	1000M	Full	Close		
26	Enable	Enable	Down	0M	1000M	Full	Close		
27	Enable	Enable	Down	0M	1000M	Full	Close		
28	Enable	Enable	Down	0M	1000M	Full	Close		

Save

4.3.2 Port Mirroring

Port mirroring is mirroring the TX/RX data flow from the source port to the destination port.

Port Configuration >> Port Mirroring

Status Operation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Mirroring Port	<input type="text" value=""/>
Mirrored Port(Select Invert)	<input type="checkbox"/> Port1 <input type="checkbox"/> Port2 <input type="checkbox"/> Port3 <input type="checkbox"/> Port4 <input type="checkbox"/> Port5 <input type="checkbox"/> Port6 <input type="checkbox"/> Port7 <input type="checkbox"/> Port8 <input type="checkbox"/> Port9 <input type="checkbox"/> Port10 <input type="checkbox"/> Port11 <input type="checkbox"/> Port12 <input type="checkbox"/> Port13 <input type="checkbox"/> Port14 <input type="checkbox"/> Port15 <input type="checkbox"/> Port16 <input type="checkbox"/> Port17 <input type="checkbox"/> Port18 <input type="checkbox"/> Port19 <input type="checkbox"/> Port20 <input type="checkbox"/> Port21 <input type="checkbox"/> Port22 <input type="checkbox"/> Port23 <input type="checkbox"/> Port24 <input type="checkbox"/> Port25 <input type="checkbox"/> Port26 <input type="checkbox"/> Port27 <input type="checkbox"/> Port28

Save

4.3.3 MAC Limit

 welcome ...

Port Configuration >> MAC Limit

Port	Status	MAC Maximum	Operating
1	Disable	100	 
2	Disable	100	 
3	Disable	100	 
4	Disable	100	 
5	Disable	100	 
6	Disable	100	 
7	Disable	100	 
8	Disable	100	 
9	Disable	100	 
10	Disable	100	 
11	Disable	100	 
12	Disable	100	 
13	Disable	100	 
14	Disable	100	 
15	Disable	100	 
16	Disable	100	 

17	Disable	100	 
18	Disable	100	 
19	Disable	100	 
20	Disable	100	 
21	Disable	100	 
22	Disable	100	 
23	Disable	100	 
24	Disable	100	 
25	Disable	100	 
26	Disable	100	 
27	Disable	100	 
28	Disable	100	 

4.3.4 Port Aggregation

Aggregate multiple Ethernet ports together to form a logical port, supports static allocation or LACP.

 welcome ...

Port Aggregation >> Basic Configuration

Policy	<input type="radio"/> SIP <input type="radio"/> DIP <input type="radio"/> SIP + DIP <input type="radio"/> SMAC <input type="radio"/> DMAC <input checked="" type="radio"/> SMAC + DMAC
--------	---

Save

Port Aggregation >> LACP

Status	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
--------	---

Save

Port Aggregation >> Aggregation Group

Aggregation Interface	Link Type	Port Members	Remarks	Operating
<div style="display: flex; justify-content: space-between; align-items: center;"> Save  </div>				

4.3.4. ACL

ACL > Bounding List

This page allows you to set port bounding ACL rules.

Port	MAC Address	IP Address	Status	Remarks	Operating
1	-	-	Dynamic	-	
2	-	-	Dynamic	-	
3	-	-	Dynamic	-	
4	-	-	Dynamic	-	
5	-	-	Dynamic	-	
6	-	-	Dynamic	-	
7	-	-	Dynamic	-	
8	-	-	Dynamic	-	
9	-	-	Dynamic	-	
10	-	-	Dynamic	-	
11	-	-	Dynamic	-	
12	-	-	Dynamic	-	
13	-	-	Dynamic	-	
14	-	-	Dynamic	-	
15	-	-	Dynamic	-	
16	-	-	Dynamic	-	
17	-	-	Dynamic	-	
18	-	-	Dynamic	-	
19	-	-	Dynamic	-	
20	-	-	Dynamic	-	
21	-	-	Dynamic	-	
22	-	-	Dynamic	-	
23	-	-	Dynamic	-	
24	-	-	Dynamic	-	
25	-	-	Dynamic	-	
26	-	-	Dynamic	-	
27	-	-	Dynamic	-	
28	-	-	Dynamic	-	

Scan

Save

4.3.5 Port Limit

Ingress & Egress Port Settings

Rate Limit > Ingress & Egress Port Settings

This page allows you to set ingress port monitoring.

Port Configuration >> Port Limit			
Port	Ingress(KB)	Egress(KB)	Operating
28	0	0	 
27	0	0	 
26	0	0	 
25	0	0	 
24	0	0	 
23	0	0	 
22	0	0	 
21	0	0	 
20	0	0	 
19	0	0	 
18	0	0	 
17	0	0	 
16	0	0	 
15	0	0	 
14	0	0	 
13	0	0	 
12	0	0	 
11	0	0	 
10	0	0	 
9	0	0	 
8	0	0	 
7	0	0	 
6	0	0	 
5	0	0	 
4	0	0	 
3	0	0	 
2	0	0	 
1	0	0	 

Save

4.3.6 Storm Control

Port Configuration > Storm Control

Port Configuration >> Storm Control				
Port	Unknown Unicast(KBPS)	Multicast(KBPS)	Broadcasting(KBPS)	Operating
28	0	0	0	 
27	0	0	0	 
26	0	0	0	 
25	0	0	0	 
24	0	0	0	 
23	0	0	0	 
22	0	0	0	 
21	0	0	0	 
20	0	0	0	 
19	0	0	0	 
18	0	0	0	 
17	0	0	0	 
16	0	0	0	 
15	0	0	0	 
14	0	0	0	 
13	0	0	0	 
12	0	0	0	 
11	0	0	0	 
10	0	0	0	 
9	0	0	0	 
8	0	0	0	 
7	0	0	0	 
6	0	0	0	 
5	0	0	0	 
4	0	0	0	 
3	0	0	0	 
2	0	0	0	 
1	0	0	0	 

Save

Port: Select ports.

Type Enable: Select the type of storm control.

- Broadcast: Broadcast packet.
- Unknown Multicast: Unknown multicast packet State.
- Unknown Uncast: Unknown uncast packet.

Rate: Value of storm control rate. Unit: PPS (packet per-second) or Kbps (Kbits per-second) depends on global mode setting. The range is from 0 to 1000000.

4.4 Port Security

4.4.1 Port Grouping

Security > Port Grouping

Port security can set port isolation and specific behavior.

Port Configuration >> Port Grouping			
NO.	Group Members	Remarks	Operating
1	1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20...	-	 



4.5 VLAN Configuration

4.5.1 802.1Q VLAN

VLAN Configuration > VLAN List

VLAN Configuration >> VLAN List				
VLAN	All Member	Untagged Member	VLAN Name	Operating
1	1-28	1-28	VLAN1	



4.5.2 PVID

VLAN ID for the selected ports:

VLAN Configuration >> PVID		
Port	Pvid	Operating
1	1	
2	1	
3	1	
4	1	
5	1	
6	1	
7	1	
8	1	
9	1	
10	1	
11	1	
12	1	
13	1	
14	1	
15	1	
16	1	
17	1	
18	1	
19	1	
20	1	
21	1	
22	1	
23	1	
24	1	
25	1	
26	1	
27	1	
28	1	

Save

4.6.POE Configuration

4.6.1. PoE Global Setting

PoE Configuration > PoE Global Setting

This page is used to check PoE Status. You can set max available power here.

POE Configuration >> POEGlobal Settings	
PSE Total Power	<input type="text" value="330"/> W
Temperature Protection	<input type="text" value="85"/> °C
Output Voltage Range	Min Voltage <input type="text" value="44"/> V Max Voltage <input type="text" value="58.5"/> V
Power supply management	<input checked="" type="radio"/> Auto <input type="radio"/> Manul
Power Manage Mode	<input checked="" type="radio"/> Dynamic <input type="radio"/> Static
<input type="button" value="Save"/>	
PSE Total Power	330 W
Temperature Protection	85 °C
Min Voltage	44 V
Max Voltage	58.5 V
Power supply management	Auto
Power Manage Mode	Dynamic
PSE1	38 °C whether or not over temperature : normal temperature
PSE2	36 °C whether or not over temperature : normal temperature
PSE3	43 °C whether or not over temperature : normal temperature
<input type="button" value="Refresh"/>	

Max Available Power: Switch configuration can provide maximum power.

System Operation Status : Display POE operation status on or off.

Main Power Consumption: Configure main power consumption.

4.6.2 Power Priority

POE Configuration >> Power Priority	
Power Supply port	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port1	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port2	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port3	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port4	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port5	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port6	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port7	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port8	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port9	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port10	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port11	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port12	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port13	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port14	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port15	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port16	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port17	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port18	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port19	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port20	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port21	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port22	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port23	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low
Port24	<input type="radio"/> Critical <input type="radio"/> High <input checked="" type="radio"/> Low

Save

4.6.3 Power Supply

POE Configuration > Power Supply

POE Configuration >> Power Supply	
All	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port1	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port2	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port3	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port4	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port5	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port6	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port7	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port8	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port9	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port10	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port11	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port12	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port13	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port14	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port15	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port16	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port17	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port18	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port19	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port20	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port21	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port22	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port23	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power
Port24	<input checked="" type="radio"/> Turn on the power <input type="radio"/> Turn off the power

Save

4.6.4 Power Limitation

POE Configuration > Power Limitation

1	10000	 
2	10000	 
3	10000	 
4	10000	 
5	10000	 
6	10000	 
7	10000	 
8	10000	 
9	10000	 
10	10000	 
11	10000	 
12	10000	 
13	10000	 
14	10000	 
15	10000	 
16	10000	 
17	10000	 
18	10000	 
19	10000	 
20	10000	 
21	10000	 
22	10000	 
23	10000	 
24	10000	 

Save

4.6.5 PoE Status

This page is used to check POE Status.

POE Configuration >> POE Status				
Port	Power Status	Voltage(V)	Current(mA)	Power(mW)
1	Turned on	0	0	0
2	Turned on	0	0	0
3	Turned on	0	0	0
4	Turned on	0	0	0
5	Turned on	0	0	0
6	Turned on	0	0	0
7	Turned on	0	0	0
8	Turned on	0	0	0
9	Turned on	0	0	0
10	Turned on	0	0	0
11	Turned on	0	0	0
12	Turned on	0	0	0
13	Turned on	0	0	0
14	Turned on	0	0	0
15	Turned on	0	0	0
16	Turned on	0	0	0
17	Turned on	0	0	0
18	Turned on	0	0	0
19	Turned on	0	0	0
20	Turned on	0	0	0
21	Turned on	0	0	0
22	Turned on	0	0	0
23	Turned on	0	0	0
24	Turned on	0	0	0

Turned on: 24 Total Power: 0.00 W

4.7 System Settings

4.7.1 Quick Settings

 welcome ...

System Settings >> Quick Settings	
Hostname	<input type="text" value="switch"/>
IP Address	<input type="text" value="192.168.2.1"/>
Netmask	<input type="text" value="255.255.255.0"/>
Default Gateway	<input type="text"/>
Primary DNS Server	<input type="text" value="0.0.0.0"/>
Secondary DNS Server	<input type="text" value="0.0.0.0"/>

4.7.2 Web Management

System Settings > WEB Management

System Settings >> WEB management Settings	
Hostname	<input type="text" value="switch"/>
* WEB Service Port	<input type="text" value="80"/>
* WEB Timeout	<input type="text" value="30"/> minutes

4.7.3 Administrator


System Settings > Administrator

System Settings >> Administrator Settings		
User Name	Privilege	Operating
admin	Administrator Permissions	

4.7.4 System Config


4.7.4.1 Restore Factory

Click Restore configuration to restore the switch to its factory default state and reset all settings.

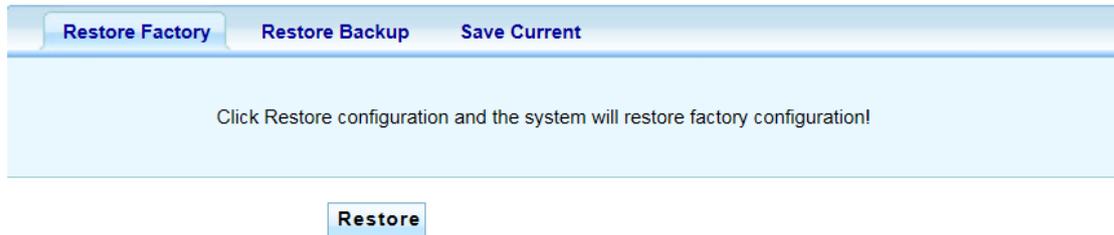

The screenshot shows a web interface with three tabs: "Restore Factory", "Restore Backup", and "Save Current". The "Restore Factory" tab is selected. Below the tabs, there is a light blue box containing the text: "Click Restore configuration and the system will restore factory configuration!". At the bottom center, there is a blue button labeled "Restore".


4.7.4.2 Restore Backup

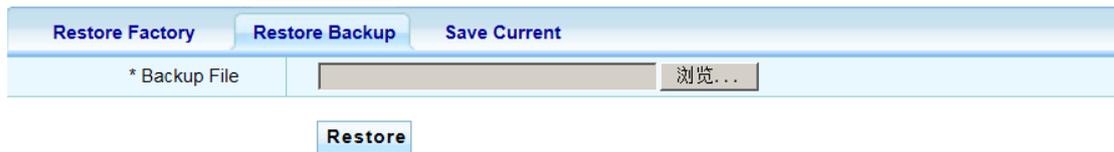

The screenshot shows a web interface with three tabs: "Restore Factory", "Restore Backup", and "Save Current". The "Restore Backup" tab is selected. Below the tabs, there is a light blue box containing the text: "* Backup File" followed by a text input field and a "浏览..." (Browse...) button. At the bottom center, there is a blue button labeled "Restore".

4.7.4.3 Save Current

Click Save to download all system configuration files.

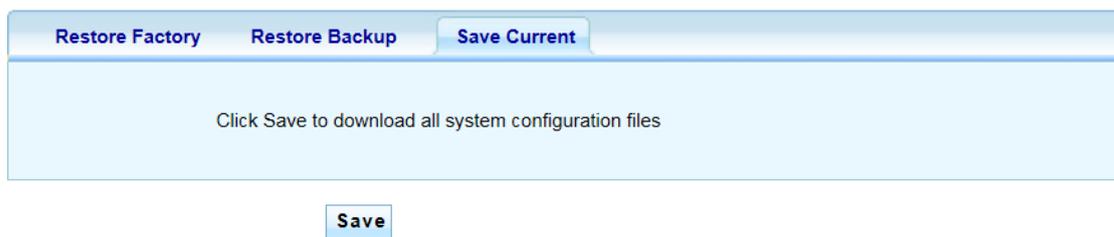

The screenshot shows a web interface with three tabs: "Restore Factory", "Restore Backup", and "Save Current". The "Save Current" tab is selected. Below the tabs, there is a light blue box containing the text: "Click Save to download all system configuration files". At the bottom center, there is a blue button labeled "Save".

4.7.5 Firmware Upgrade

System setting > Firmware Upgrade

This page allow you to upgrade to new firmware file from a remote TFTP server or from local storage.

 welcome ...

System Settings >> Firmware Upgrade	
Current Version	0.3.023d
* Upgrade File	<input type="text"/> <input type="button" value="浏览..."/>

4.7.6 System Time

System Settings > System Time

Set time zone and time services such as automatic daylight savings synchronization.

 welcome ...

System Time		System Time Zone	Network Time
Update Mode	<input checked="" type="radio"/> Synchronization Time	<input type="radio"/> Manually Set	
Computer Time	2015-06-08 13:55:01		
System Time	2015-06-08 14:10:11		

4.7.7 Reboot

System setting > Reboot

Reboot the switch by clicking the “Reboot” button.

 welcome ...

System Settings >> Reboot
To reboot the switch, please click “Reboot”

4.8 System log

4.8.1 Event Log

System Log > Event Log

 welcome ...

System Log >> Event Log		
Time	Level	Message
2015-06-08 14:02:50	Warning	HTTP:Administrator admin login from 192.168.2.3.Result:Accepted.
2015-06-08 11:54:44	Info	HTTP:The administrator admin at 192.168.2.3 updated POE configuration.
2015-06-08 10:34:34	Warning	HTTP:Administrator admin login from 192.168.2.3.Result:Accepted.
2015-06-08 10:25:49	Warning	HTTP:Administrator admin login from 192.168.2.3.Result:Accepted.
2015-06-08 10:18:19	Warning	HTTP:Administrator admin login from 192.168.2.3.Result:Accepted.
2015-06-05 16:47:56	Warning	HTTP:Administrator admin login from 192.168.2.123.Result:Accepted.
2015-06-05 16:45:59	Warning	HTTP:Administrator admin login from 192.168.169.123.Result:Accepted.
2015-04-14 16:35:07	Warning	HTTP:Administrator admin login from 192.168.169.167.Result:Accepted.
2015-04-14 16:34:52	Warning	HTTP:Administrator admin login from 192.168.169.167.Result:Accepted.
2015-04-03 10:06:46	Warning	HTTP:Administrator admin login from 192.168.169.167.Result:Accepted.
2015-04-03 10:00:54	Warning	HTTP:Administrator admin login from 192.168.169.167.Result:Accepted.

Level: total 11 Page Size Page No. 1 / 1 [Refresh](#) [First](#) [Prev](#) [Next](#) [Last](#) [Clear](#) [Export](#) Goto

4.8.2 Alarm Log

System Log > Alarm Log

This page is used to configure alarm groups.

 welcome ...

System Log >> Alarm Log		
Time	Level	Message
2015-06-05 16:50:11	Fatal	HTTP:The administrator admin restarted the system.
2015-06-05 16:50:00	Fatal	HTTP:The administrator admin upgrade successful.
2015-06-05 16:46:44	Fatal	HTTP:The administrator admin restarted the system.
2015-06-05 16:46:36	Fatal	HTTP:The administrator admin upgrade successful.
2015-04-03 10:02:39	Fatal	HTTP:The administrator admin upgrade successful.

Level: total 5 Page Size Page No. 1 / 1 [Refresh](#) [First](#) [Prev](#) [Next](#) [Last](#) [Clear](#) [Export](#) Goto

4.8.3 Security Log

System Log > Security Log

Use the security log page to configure settings for the switch security log.

System Log >> Security Log

Time	Level	Message
------	-------	---------

Level: total 0 Page Size Page No. 1 / 1 [Refresh](#) [First](#) [Prev](#) [Next](#) [Last](#) [Clear](#) [Export](#) Goto

4.8.4 Network Log

System Log > Network Log

System Log >> Network Log

Time	Level	Message
------	-------	---------

Level: total 0 Page Size Page No. 1 / 1 [Refresh](#) [First](#) [Prev](#) [Next](#) [Last](#) [Clear](#) [Export](#) Goto

4.8.5 Protocol Log

System Log > Protocol Log

 welcome ...

System Log >> Protocol Log

Time	Level	Message
------	-------	---------

Level: total 0 Page Size Page No. 1 / 1 [Refresh](#) [First](#) [Prev](#) [Next](#) [Last](#) [Clear](#) [Export](#) Goto

COPYRIGHT

Copyright © Edimax Technology Co., Ltd. all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission from Edimax Technology Co., Ltd.

Edimax Technology Co., Ltd. makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability, or fitness for any particular purpose. Any software described in this manual is sold or licensed as is. Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Edimax Technology Co., Ltd. reserves the right to revise this publication and to make changes from time to time in the contents hereof without the obligation to notify any person of such revision or changes.

The product you have purchased and the setup screen may appear slightly different from those shown in this QIG. The software and specifications are subject to change without notice. Please visit our website www.edimax.com for updates. All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

Federal Communications Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 2.5cm (1 inch) during normal operation.

Federal Communications Commission (FCC) RF Exposure Requirements

SAR compliance has been established in the laptop computer(s) configurations with PCMCIA slot on the side near the center, as tested in the application for certification, and can be used in laptop computer(s) with substantially similar physical dimensions, construction, and electrical and RF characteristics. Use in other devices such as PDAs or lap pads is not authorized. This transmitter is restricted for use with the specific antenna tested in the application for certification. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE). The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Bulgaria, Cyprus, Czech, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, and United Kingdom. The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not Intended for Use

None

EU Declaration of Conformity

- English:** This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Français:** Cet équipement est conforme aux exigences essentielles et autres dispositions de la directive 1995/5/CE, 2009/125/CE, 2006/95/CE, 2011/65/CE.
- Čeština:** Toto zařízení je v souladu se základními požadavky a ostatními příslušnými ustanoveními směrnic 1995/5/ES, 2009/125/ES, 2006/95/ES, 2011/65/ES.
- Polski:** Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC..
- Română:** Acest echipament este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 1995/5/CE, 2009/125/CE, 2006/95/CE, 2011/65/CE.
- Русский:** Это оборудование соответствует основным требованиям и положениям Директивы 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Magyar:** Ez a berendezés megfelel az alapvető követelményeknek és más vonatkozó irányelveknek (1995/5/EK, 2009/125/EK, 2006/95/EK, 2011/65/EK).
- Türkçe:** Bu cihaz 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC direktifleri zorunlu istekler ve diğer hükümlerle ile uyumludur.
- Українська:** Обладнання відповідає вимогам і умовам директиви 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Slovenčina:** Toto zariadenie spĺňa základné požiadavky a ďalšie príslušné ustanovenia smerníc 1995/5/ES, 2009/125/ES, 2006/95/ES, 2011/65/ES.
- Deutsch:** Dieses Gerät erfüllt die Voraussetzungen gemäß den Richtlinien 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Español:** El presente equipo cumple los requisitos esenciales de la Directiva 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Italiano:** Questo apparecchio è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 1995/5/CE, 2009/125/CE, 2006/95/CE, 2011/65/CE.
- Nederlands:** Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van richtlijn 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC..
- Português:** Este equipamento cumpre os requisitos essenciais da Directiva 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Norsk:** Dette utstyret er i samsvar med de viktigste kravene og andre relevante regler i Direktiv 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- Svenska:** Denna utrustning är i överensstämmelse med de väsentliga kraven och övriga relevanta bestämmelser i direktiv 1995/5/EG, 2009/125/EG, 2006/95/EG, 2011/65/EG.
- Dansk:** Dette udstyr er i overensstemmelse med de væsentligste krav og andre relevante forordninger i direktiv 1995/5/EC, 2009/125/EC, 2006/95/EC, 2011/65/EC.
- suomen kieli:** Tämä laite täyttää direktiivien 1995/5/EY, 2009/125/EY, 2006/95/EY, 2011/65/EY oleelliset vaatimukset ja muut asiaankuuluvat määräykset.

FOR USE IN 



WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European R&TTE directives.

Equipment: GS-5424PLG PoE Web Smart Switch

Model No.: GS-5424PLG

The following European standards for essential requirements have been followed:

EMC : EN55022:2010
EN55024:2010
Safety (LVD) : EN61000-3-2:2006+A1:2009+A2:2009
EN61000-3-3:2013
EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011+A2:2013

Edimax Technology Co., Ltd.

No. 3, Wu Chuan 3rd Road,

Wu-Ku Industrial Park,

New Taipei City, Taiwan

Date of Signature: Jun, 2015



Signature:

A handwritten signature in black ink, appearing to read 'Albert Chang', written over a horizontal line.

Printed Name:

Albert Chang

Title:

Director

Edimax Technology Co., Ltd.

Notice According to GNU General Public License Version 2

This product includes software that is subject to the GNU General Public License version 2. The program is free software and distributed without any warranty of the author. We offer, valid for at least three years, to give you, for a charge no more than the costs of physically performing source distribution, a complete machine-readable copy of the corresponding source code.

Das Produkt beinhaltet Software, die den Bedingungen der GNU/GPL-Version 2 unterliegt. Das Programm ist eine sog. „Free Software“, der Autor stellt das Programm ohne irgendeine Gewährleistungen zur Verfügung. Wir bieten Ihnen für einen Zeitraum von drei Jahren an, eine vollständige maschinenlesbare Kopie des Quelltextes der Programme zur Verfügung zu stellen – zu nicht höheren Kosten als denen, die durch den physikalischen Kopiervorgang anfallen.

GNU GENERAL PUBLIC LICENSE Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.



ΣD I MAX
NETWORKING PEOPLE TOGETHER